



PARTS BREAKDOWN POWEREASE 420 ENGINE

MODEL:85.570.150



BEPOWEREQUIPMENT


.COM



PARTS BREAKDOWN POWEREASE 420 ENGINE


MODEL:85.570.150

HEAD SUBASSEMBLY

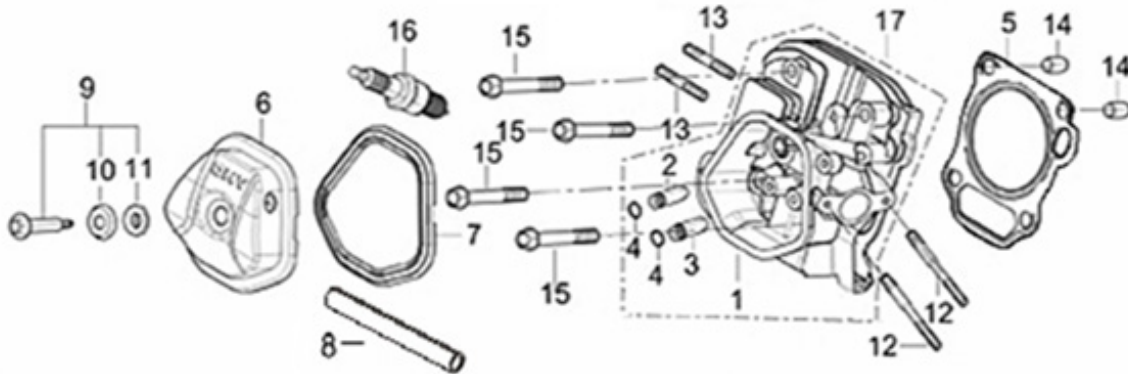

REF #	DESCRIPTION	QTY	BE PART #
5	GASKET, CYLINDER HEAD	1	85.571.021
6	COVER, CYLINDER HEAD ASSEMBLY	1	85.571.022
7	GASKET, CYLINDER HEAD COVER	1	
16	SPARK PLUG	1	85.519.001

CRANKCASE

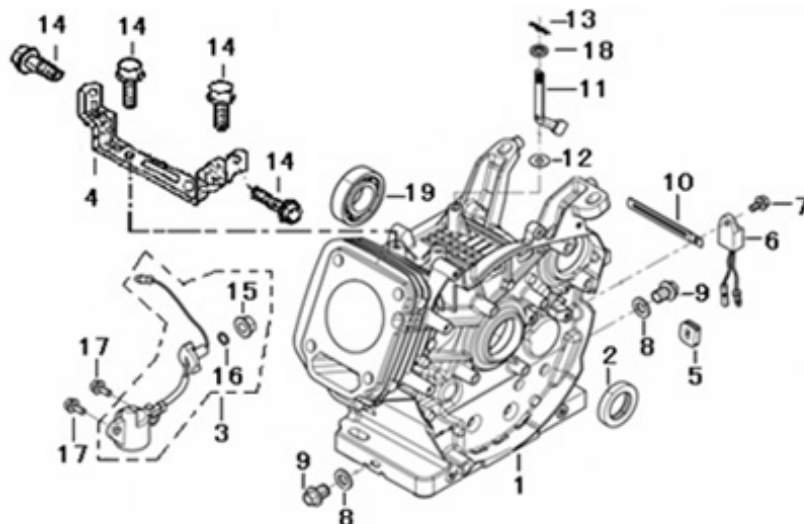


REF #	DESCRIPTION	QTY	BE PART #
3	INTERNAL SENSOR, LOW OIL	1	85.571.023
6	EXTERNAL SENSOR, LOW OIL	1	



PARTS BREAKDOWN POWEREASE 420 ENGINE


MODEL:85.570.150

CRANKCASE COVER

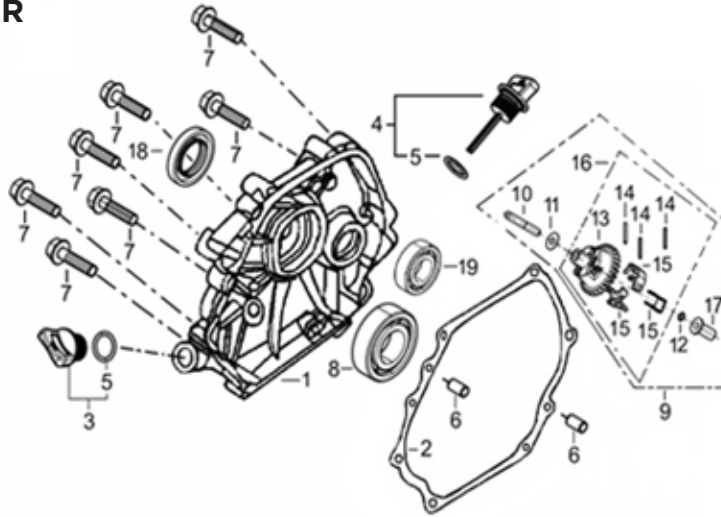

REF #	DESCRIPTION	QTY	BE PART #
2	GASKET, CRANKCASE	1	85.571.024
18	SEAL, OIL	1	
3	PLUG ASSEMBLY	1	85.571.025
4	DIPSTICK ASSEMBLY	1	

RECOIL ASSEMBLY

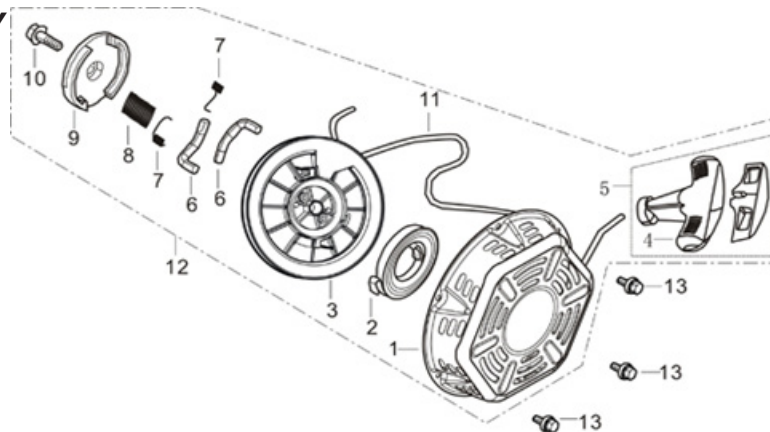


REF #	DESCRIPTION	QTY	BE PART #
12	STARTER RECOIL ASSEMBLY	1	85.571.026



PARTS BREAKDOWN POWEREASE 420 ENGINE


MODEL:85.570.150

ENGINE SHROUD

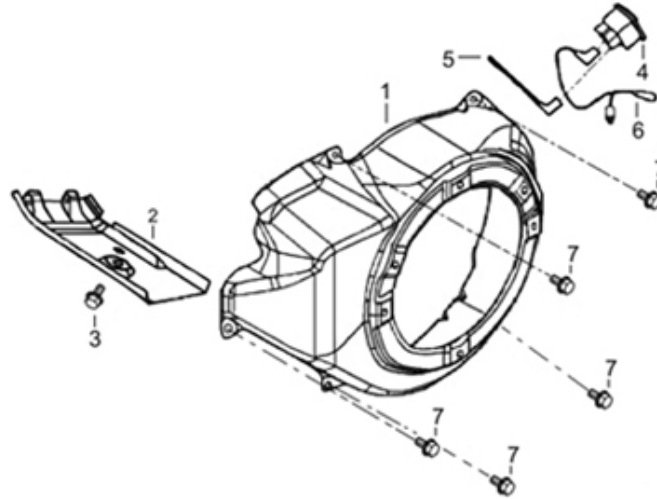

REF #	DESCRIPTION	QTY	BE PART #
1	SHROUD (BLACK)	1	85.571.027
4	SWITCH, ON/OFF	1	85.571.008

CARBURETOR

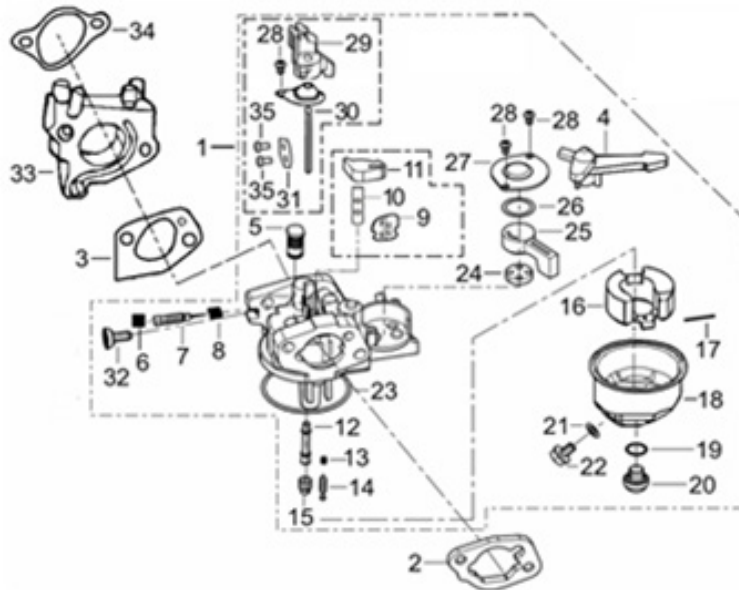


REF #	DESCRIPTION	QTY	BE PART #
1	CARBURETOR ASSEMBLY	1	85.571.028
2	GASKET, AIR CLEANER	1	
3	GASKET, CARBURETOR	1	



PARTS BREAKDOWN POWEREASE 420 ENGINE


MODEL:85.570.150

AIR FILTER

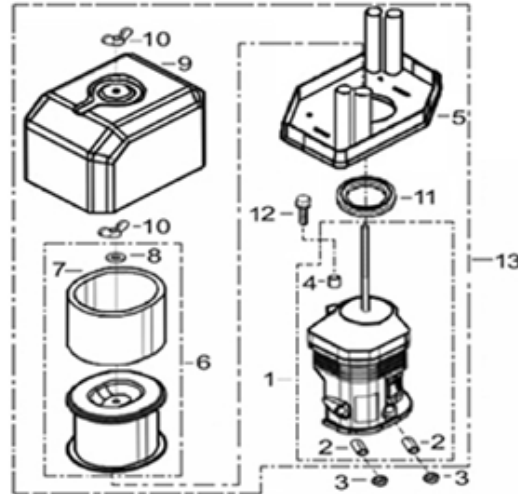

REF #	DESCRIPTION	QTY	BE PART #
13	AIR FILTER ASSEMBLY	1	85.571.029

MUFFLER ASSY

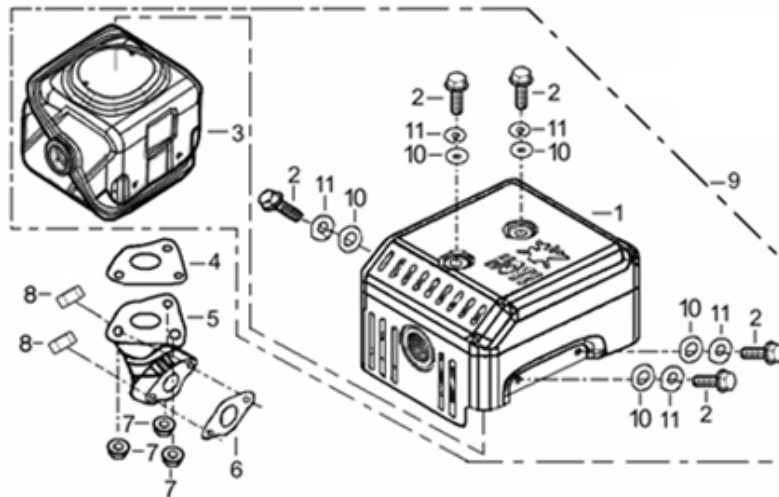


REF #	DESCRIPTION	QTY	BE PART #
1	MUFFLER ASSEMBLY	1	85.571.030



PARTS BREAKDOWN POWEREASE 420 ENGINE


MODEL:85.570.150

FUEL TANK

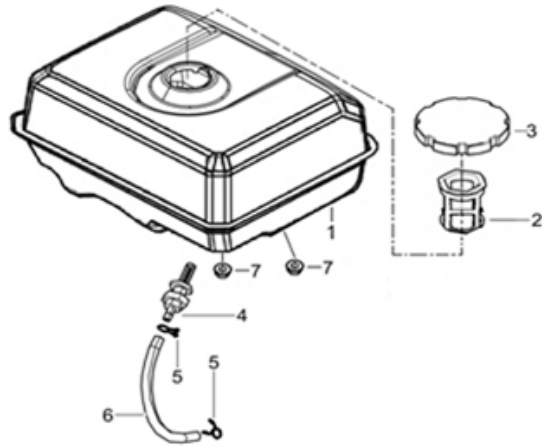

REF #	DESCRIPTION	QTY	BE PART #
1	TANK, FUEL	1	85.571.031
3	FUEL CAP, VENTED	1	85.571.013
4	OUTLET, FUEL	1	85.571.042
5	CLIPS	2	
6	TUBE, FUEL	1	

IGNITION COIL

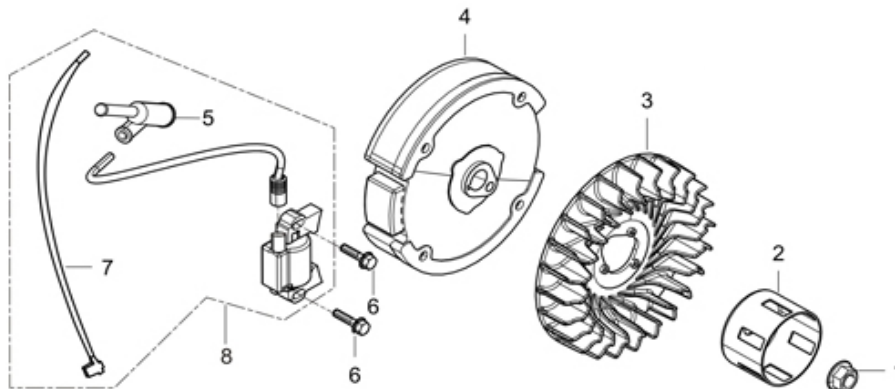


REF #	DESCRIPTION	QTY	BE PART #
8	IGNITION COIL	1	85.571.032



PARTS BREAKDOWN POWEREASE 420 ENGINE

MODEL:85.570.150

THROTTLE CONTROL

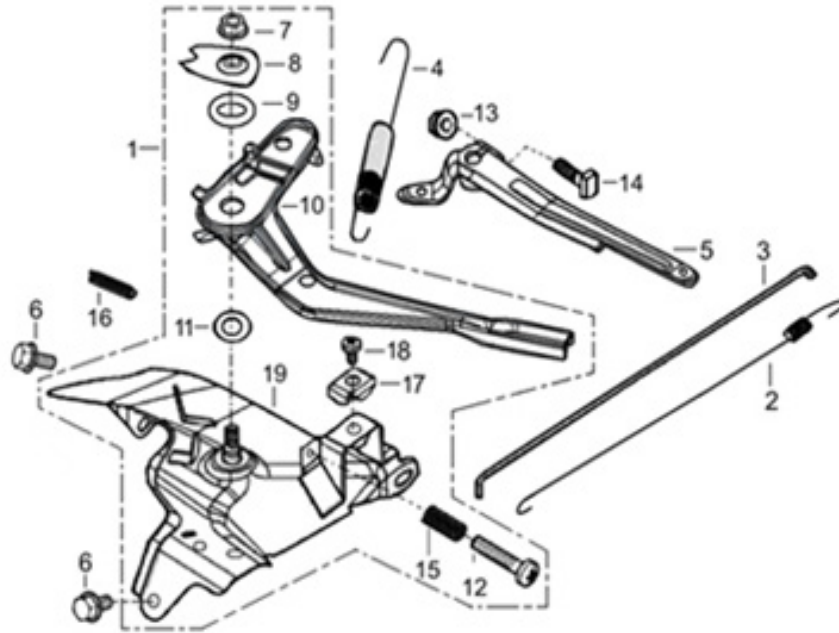

REF #	DESCRIPTION	QTY	BE PART #
1	CONTROL ASSEMBLY, THROTTLE	1	85.571.137

BE

POWER EQUIPMENT

If you need technical assistance call:

1-866-850-6662

(8:00am - 4:30pm PST, Mon - Fri)