

## **TECHNICAL BULLETIN**


#TB10015

## TOPIC

REPLACING AN O-RING IN A QUICK COUPLING

## **MODEL REFERENCE**

ALL PRESSURE WASHERS WITH QUICK COUPLERS

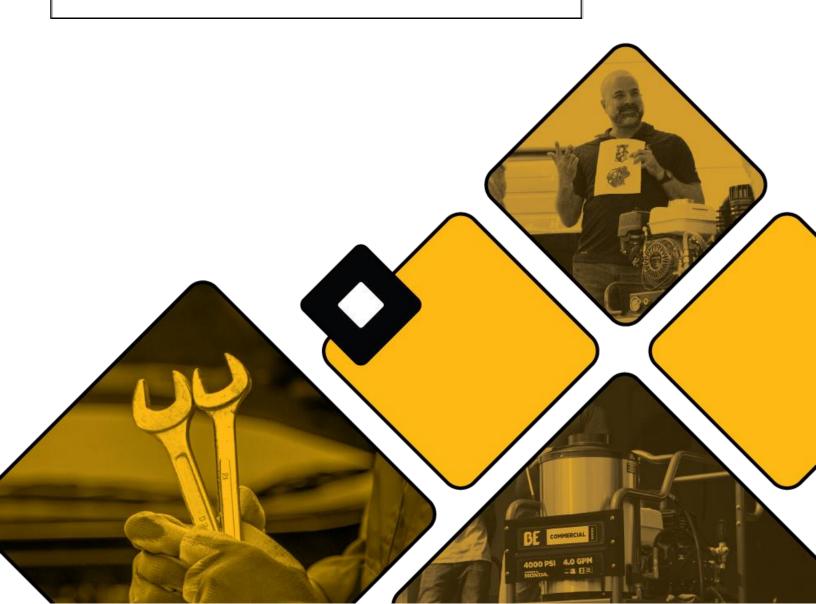



The O-ring in a quick coupling (1/4 OR 3/8), whether on the hose or at the end of the lance, can be damaged or worn, it is not abnormal to replace it.

A damaged or missing O-ring on a quick coupling will cause a constant water leak.



## POWER EQUIPMENT



To remove the O-ring, use a small screwdriver or needle, pressing the end of the O-ring, lift it by turning upwards.





To install a new O-ring in the quick coupler, pinch the O-ring between your fingers and insert it into the coupler.







Take a small flat screwdriver and push the O-ring gently, starting with the bottom part by pushing it to the side and down into the grove. Do this all the way around the O-ring until it is completely seated into the grove at the bottom of the coupler.



