






PRESSURE WASHER BREAKDOWN

B275HA

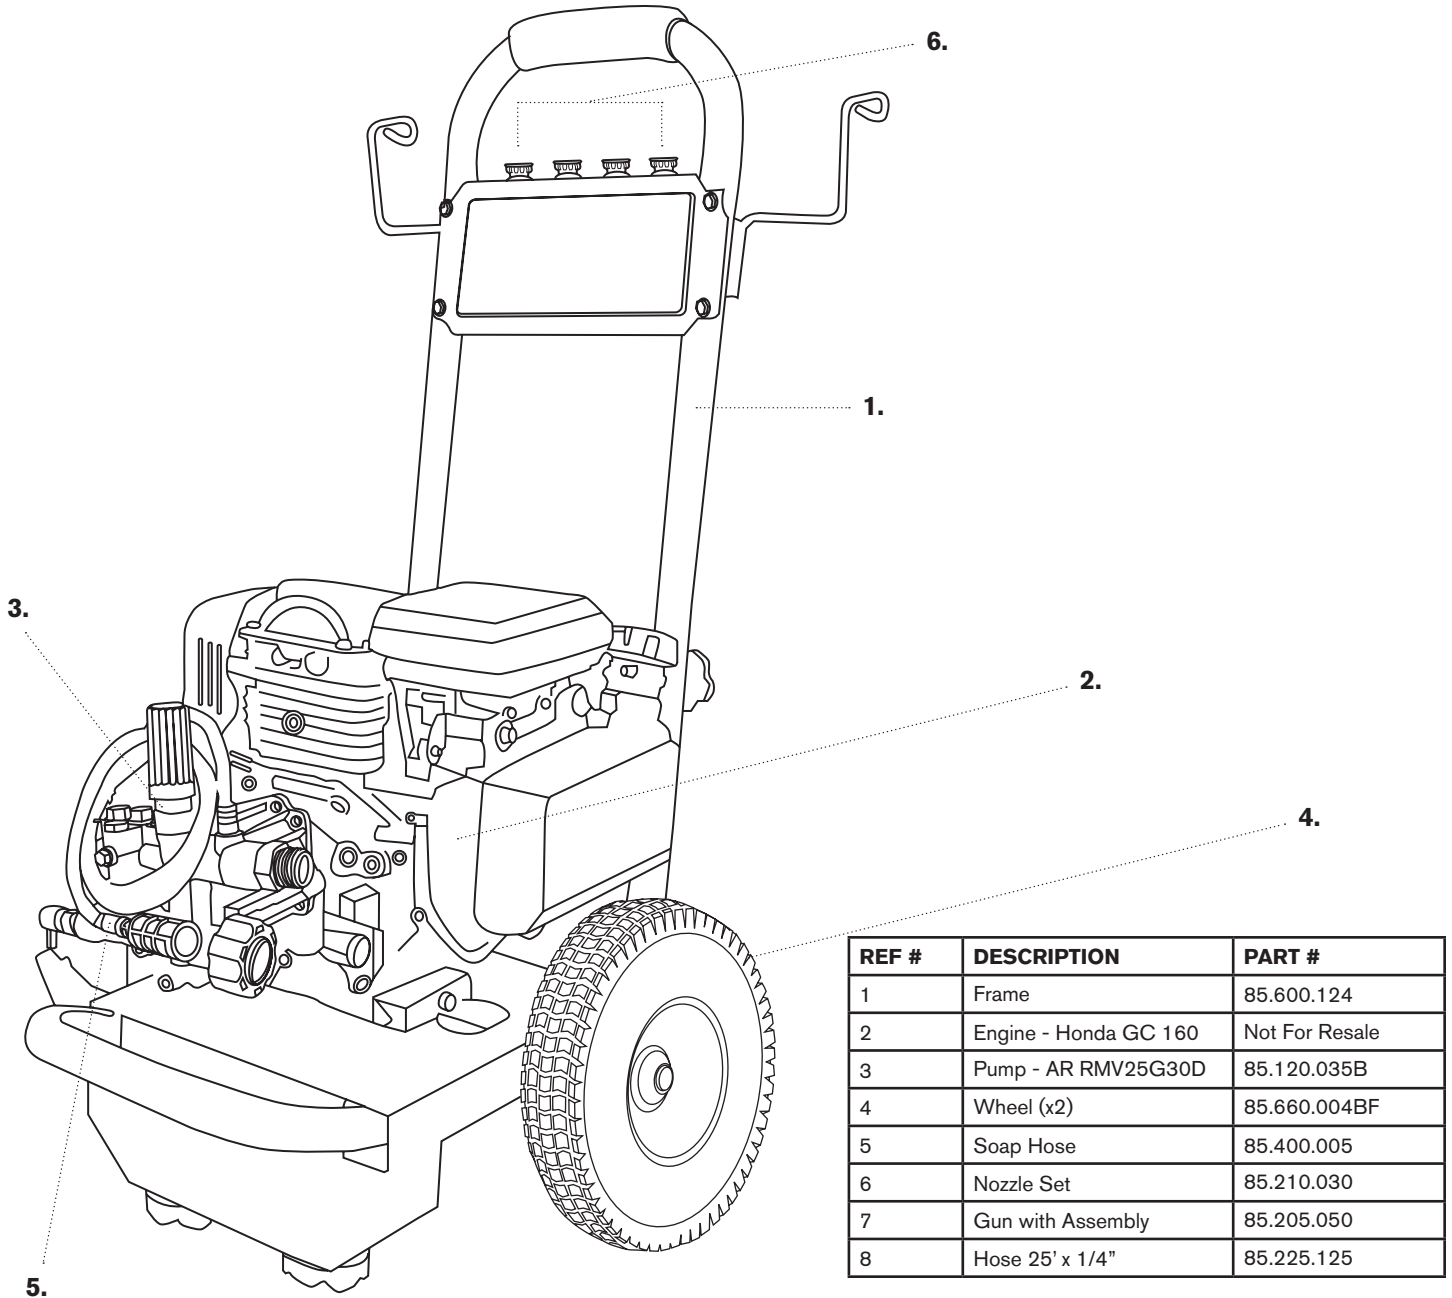

REF #	DESCRIPTION	PART #
1	Frame	85.600.124
2	Engine - Honda GC 160	Not For Resale
3	Pump - AR RMV25G30D	85.120.035B
4	Wheel (x2)	85.660.004BF
5	Soap Hose	85.400.005
6	Nozzle Set	85.210.030
7	Gun with Assembly	85.205.050
8	Hose 25' x 1/4"	85.225.125

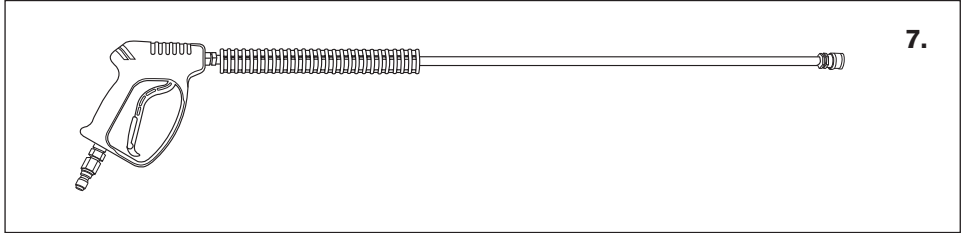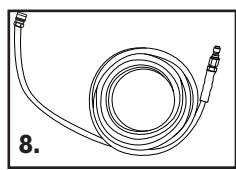





PRESSURE WASHER BREAKDOWN

B275HA

85.550.052 - Maintenance Kit:


- Oil cap
- Air filter
- Spark plug
- 1 LTR Oil

* For other replacement parts, please contact your local Honda dealer.

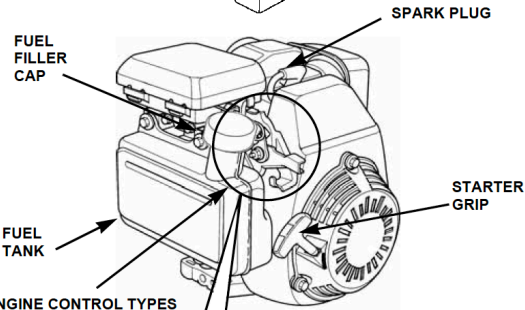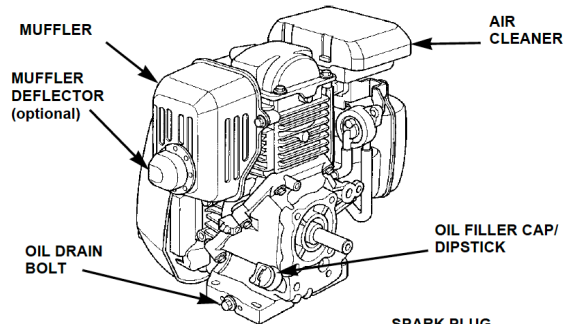


ENGINE CONTROL TYPES


TYPE 1: MANUAL THROTTLE / MANUAL CHOKE

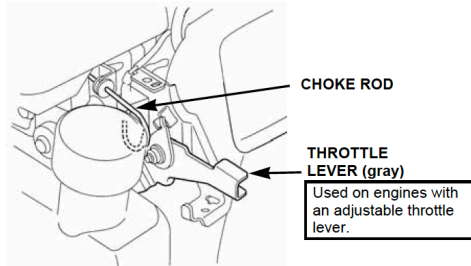

TYPE 2: FIXED THROTTLE / IGNITION SWITCH LEVER / MANUAL CHOKE

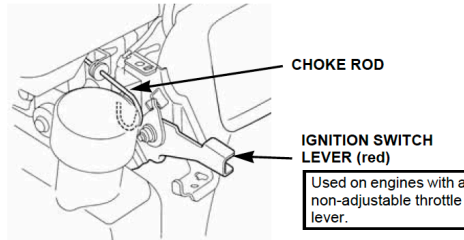


TYPE 3: FIXED THROTTLE / ENGINE STOP SWITCH / MANUAL CHOKE

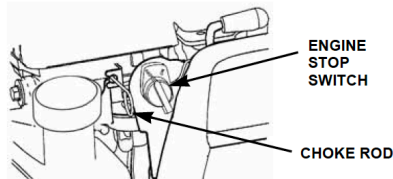







PRESSURE WASHER BREAKDOWN

B275HA

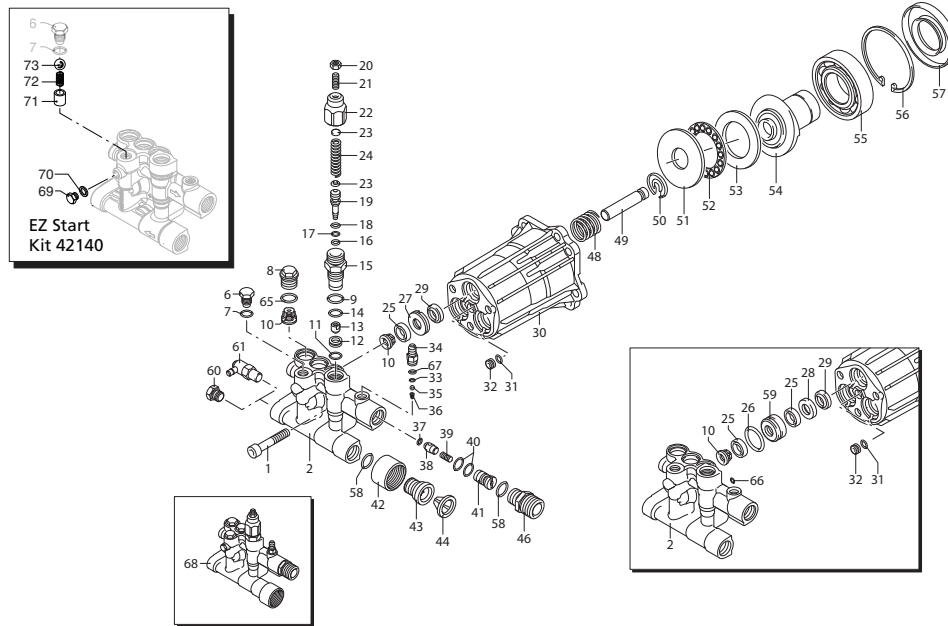

Repair Kits

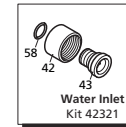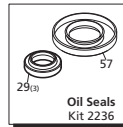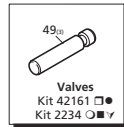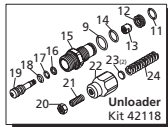

Pos	Code	Description	Qty	Pos	Code	Description	Qty	Pos	Code	Description	Qty
	380410	Screw	(221 in/lbs) √ ○ 3	30	2840230	Pump body	1	57	2841050	Ring	1
	800220	Screw	(221 in/lbs) □ ○ 3	31	480560	O-Ring ∅ 6.75x1.78	1	58	2840890	O-Ring ∅ 14x2	2
	2841730	Head	√ 1	32	2840710	Plug	1	59	1683500	Oil seal	3
	2840022	Head	■ 1	33	480480	O-Ring ∅ 4.48x1.78	1	59	2840840	Plug	√ ○ 1
	2840870	Head	○ 1	34	1982520	Hose tail ∅ 8	(35 in/lbs) 1	60	480650	Washer	1
	2841620	Head	□ ● 1	35	3700240	Hose tail ∅ 8	(35 in/lbs) √ ● 1	61	TPP1401/4A	Thermal relief valve	1
6	2840830	Screw	(89 in/lbs) 1	36	1250280	Ball	1	62	1060100	Ball	√ 1
7	600180	O-Ring ∅ 7.66x1.78	1	37	1560520	Spring	1	63	2840440	Seat	√ 1
8	2841530	Valve cap	(221 in/lbs) 3	38	1460431	O-Ring ∅ 4x2.5	1	64	2840450	Spring	√ 1
9	740290	O-Ring ∅ 14x1.78	1	39	2841150	Shutter	1	65	2841520	O-Ring ∅ 13.5x1.8	3
10	2849051	Complete Valve	● ○ 6	40	3700220	Jet	√ ● 1	66	3400650	Plug	1
11	2849050	Complete Valve	√ ■ □ 6	41	1343580	Spring	1	67	480650	Washer	√ 1
12	1470210	O-Ring ∅ 9x1	1	42	800560	O-Ring ∅ 8.73x1.78	2	68	2849284	Complete head assembly	√ ■ 1
13	2840770	Seat	● ○ 1	43	2840340	Injector	1	69	2840840	Plug (EZ start pump only)	1
14	2841080	Seat	√ ■ □ 1	44	3700200	Detergent injector	√ ● 1	70	480650	Washer (EZ start pump only)	1
15	2840760	Shutter	(27 in/lbs) 1	45	2840270	Fitting	○ ■ 1	71	2840441	Seat (EZ start pump only)	1
16	820510	O-Ring ∅ 10.82x1.78	1	46	2841220	Fitting 3/4" NH	√ ○ □ 1	72	2840450	Spring (EZ start pump only)	1
17	2840750	Piston guide	(177 in/lbs) 1	47	2841230	Fitting Aluminium (221 in/lbs) √ ● ○ ■ 1	1	73	1060100	Ball (EZ start pump only)	1
18	2760210	Ring	1	48	2840390	Fitting Brass (221 in/lbs) □ 1	1				
19	660190	O-Ring ∅ 6.07x1.78	1	49	7369	Filter	1		AR64545	Oil	1
20	2260100	O-Ring ∅ 6.02x2.62	1	50	2840400	Fitting 3/8" G M (221 in/lbs) ○ 1	1				
21	2841140	Piston	1	51	2841380	Fitting (221 in/lbs) ■ 1	1				
22	1060120	Nut M6	1	52	2841120	Fitting (221 in/lbs) □ √ ● 1	1				
23	392840	Screw M6x16	1	53	2840060	Spring	3				
24	2760480	Insert	1	54	2840040	Piston ∅ 12	√ ○ 3				
25	1980220	Wobble plate	2	55	2840530	Piston ∅ 12	■ □ ○ 3				
26	2760410	Spring	1	56	2840050	Lock	3				
27	2200141	Water seal	√ ○ 3		57	1980130	Fifth wheel	1			
28	2200141	Water seal	□ ● 6		58	1980250	Fifth wheel	1			
29	770260	O-Ring ∅ 23.52x1.78	1		59	1980240	Fifth wheel	1			
	770590	O-Ring ∅ 21.95x1.78	● 3		60	2840050	Wobble plate	■ 1			
	2840561	Bushing ∅ 12	3		61	2840900	Wobble plate	○ 1			
	2840550	Bushing ∅ 12	● 3		62	2840720	Wobble plate	√ 1			
	2840540	Bushing ∅ 12	3		63	2840730	Wobble plate	□ ● 1			
	2840561	Bushing	√ 3		64	161060	Bearing	1			
	1683500	Oil seal	√ □ ● 3		65	161050	Ring ∅ 72	1			

Legend

∅ 12	∅ 12	∅ 12
For ○	For ●	For □
RMV2G25 (Brass)	RMV25G30 (Brass)	RMV22G25-EZ (Brass)
	RMV25G30-EZ (Brass)	
For ■		For √
RMV25G24 (Alum)		RMV22G24 (Alum)